

Creating an ALDOT Workspace for OpenRoads Designer

The following steps allow you to create and run the ALDOT OpenRoads Designer Workspace.

Step 1:

Go to the following link:

<https://www.dot.state.al.us/dsweb/divfdd/DesignServicesSection/CADDSupport.html>

Click on the link “**ALDOT OpenRoads Designer**” to download the zip file that contains the ALDOT workspace files.


Step 2:

Once the zip file is downloaded unzip it to the **C:\ProgramData\Bentley\OpenRoads Designer CE\Configuration** directory if you took the OpenRoads Designer default location upon installation. Make sure to use the folder structure in the zip file.


If you chose to install the workspaces in a different location, you will need to navigate to the Configuration directory in that location.

Step 3:

Start OpenRoads Designer. When product comes up for you to pick a file pick ALDOT Standards for the workspace.

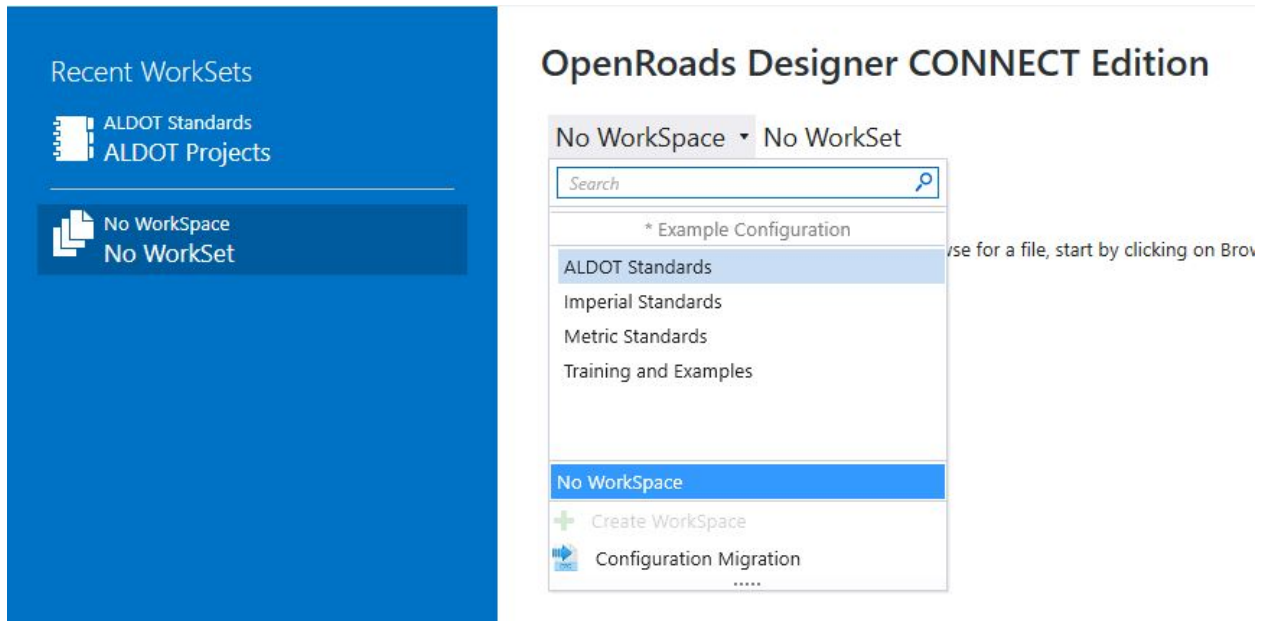

Next pick the ALDOT Projects for the Workset

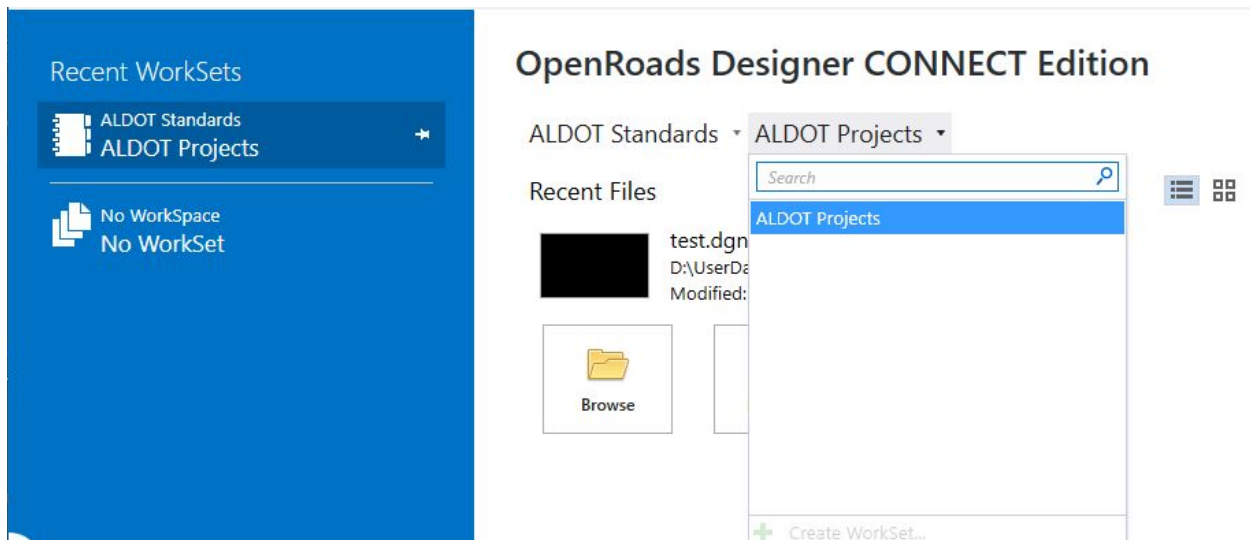

Type in ALDOT_Projects for the name and Click OK.

You are now set up to start your project using the ALDOT workspace and standards.